


A300/A1000/A3000/A5000(Bluetooth) User Manual

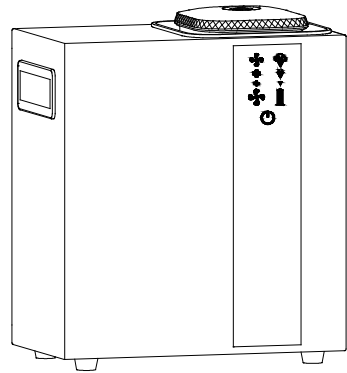

Download app

Please read the user manual carefully before using the product and keep it in a safe place.

Safety Precautions:


- 1: Do not use overloaded power supplies, sockets, and damaged power cords and plugs. If used, it may endanger your safety and may cause fire. If this happens, please promptly report to the sales or after-sales department and request replacement.
- 2: Please do not open the inside of the device to avoid the device damage. If the device works in error, please read the user manual carefully, follow the normal procedure or consult sales and after-sales.
- 3: When the device is working, do not disassemble the device or shake the device vigorously, to avoid the device to work abnormally.
- 4: Do not put the device or power adapter in water or watering, do not use a watering power adapter.
- 5: When the device is already filled with liquid (essential oil), do not invert, tilt or rotate the device to device liquid spillage and damage the device.
- 6: When encountering natural weather thunder, do not operate the device or touch the power cord to avoid the risk of electric shock.

Product Specification:


Model	A300	A1000	A3000	A5000
Oil Capacity	200ML	800ML	800ML	800ML
Coverage Area	500m2	1500m2	2000m2	3000m2
Power	8W	13W	12W	13W
Oil Consumption	2.5g±0.2g	5g±0.5g	6g±0.6g	8g±0.8g
Size	W: 160mm D: 86mm H: 205mm	W: 200mm D: 140mm H: 285mm	W: 250mm D: 140mm H: 285mm	W: 270mm D: 140mm H: 285mm
N.W	1.55 kg	3.0 kg	4.0 kg	5.0 kg
Voltage	DC12V0.5A	DC12V1A	DC12V1A	AC 100-240V
Noise	40db	35db	35db	35db
Install Method	stand alone & HVAC			

Oil consumption means : the device in the maximum setting, the test oil is Shangri-La, the test oil consistency is 9.5MPA.S, the room temperature is 30 °C, the air humidity is 45%. Above is for reference.

Install Instruction:

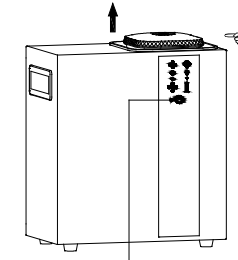

- extended press 5 seconds to switch off machine
- press for 1 second to switch on
- quick press three times to restore original setting of machine

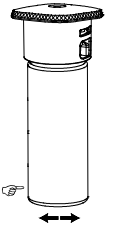

- 1, connect to power supply
- 2, put the magnet key against unlock area
- 3, pull out atomizer head with bottle from top of machine

- 4, remove bottle by rotating counterclockwise, and fill in fragrance oil. then tighten it by clockwise rotation, put atomizing head back to machine, it locks up automatically.

User Manual

1. Scan the QR code of the cover or search the "Scent Master" app in the app store to download and install.

2. Open the app homepage interface, click [Stand Alone Mode] (as shown in Figure 1)

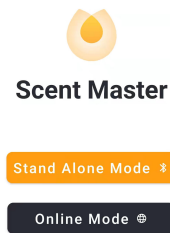


Figure 1

3. Click the search device to pop up the password input dialog box and enter the initial password 9999 (as shown in Figure 2)


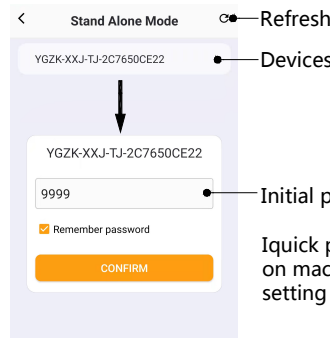


Figure 2

4. Working settings

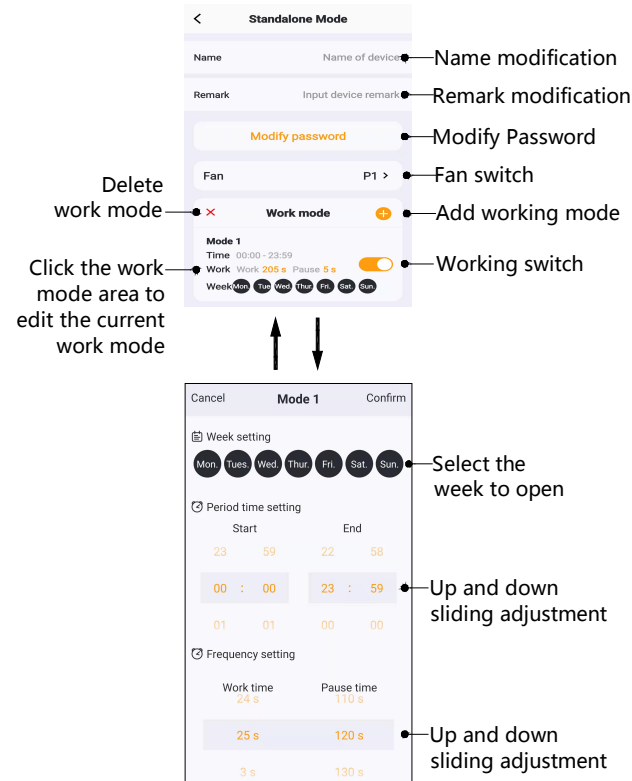

Device Maintains:

Maintain the device every 6 months, or replace the essential oil if the scent weaker.

1. Open the device cover, take off the oil bottle.
2. Each time replace the essential oil, should clean the oil pipe filter.
3. Pour an appropriate amount of alcohol into the essential oil bottle and clean it;
4. Check whether the nozzle of atomizing core is clean. If there is blackening and powder accumulation, it can be removed with toothpick or paper towel;

Fault Resolution:

Device Fault	Solution
Device not work	-Check if use wrong power supply. -Check if the power is on. -Check the setting of device work time.
No atomization	-Check if the pump work normal, if the nuzzle blocked. -Check if the fog outlet seal ring broken or fall off. -Check if the oil pipe blocked or fall off.
Weak atomization	-Check if the seal ring of fog outlet pipe damage. -Check if the nozzle blocked. -Check if the connection of atomizer and nuzzle loose.
Oil leak	-Check if the atomizer broken. -Check if the gasket broken and need change. -Check if the connection of oil bottle and atomizer close tighten.
Abnormal noise	-Pump loose, fix the pump. -Pump broken, change new pump. -Check if the fan fixed well.

Packing Accessories:

Power Supply	Key	User Manual


After Sale Service:

The warranty period of the equipment is 1 year from the date of sale. Easily damaged accessories such as housing, wire and outer pipe are not covered by the warranty, and man-made damage and accident damage are not covered by the warranty. If the warranty period is exceeded, we will charge maintenance fees.

Warranty Card:

Maintain Date	Maintain Item	Maintain Company	Maintain Staff

A300/A1000/A3000/A5000(WIFI/4G) User Manual

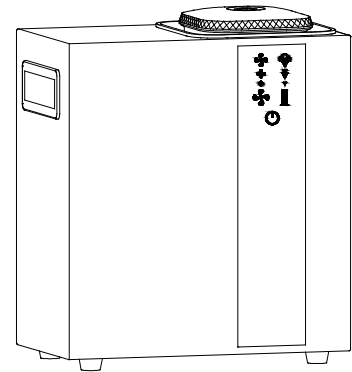

Download app

Please read the user manual carefully before using the product and keep it in a safe place.

Safety Precautions:


- 1: Do not use overloaded power supplies, sockets, and damaged power cords and plugs. If used, it may endanger your safety and may cause fire. If this happens, please promptly report to the sales or after-sales department and request replacement.
- 2: Please do not open the inside of the device to avoid the device damage. If the device works in error, please read the user manual carefully, follow the normal procedure or consult sales and after-sales.
- 3: When the device is working, do not disassemble the device or shake the device vigorously, to avoid the device to work abnormally.
- 4: Do not put the device or power adapter in water or watering, do not use a watering power adapter.
- 5: When the device is already filled with liquid (essential oil), do not invert, tilt or rotate the device to device liquid spillage and damage the device.
- 6: When encountering natural weather thunder, do not operate the device or touch the power cord to avoid the risk of electric shock.

Product Specification:


Model	A300	A1000	A3000	A5000
Oil Capacity	200ML	800ML	800ML	800ML
Coverage Area	500m ²	1500m ²	2000m ²	3000m ²
Power	8W	13W	12W	13W
Oil Consumption	2.5g±0.2g	5g±0.5g	6g±0.6g	8g±0.8g
Size	W: 160mm D: 86mm H: 205mm	W: 200mm D: 140mm H: 285mm	W: 250mm D: 140mm H: 285mm	W: 270mm D: 140mm H: 285mm
N.W	1.55 kg	3.0 kg	4.0 kg	5.0 kg
Voltage	DC12V0.5A	DC12V1A	DC12V1A	AC 100-240V
Noise	40db	35db	35db	35db
Install Method	stand alone & HVAC			

Oil consumption means : the device in the maximum setting, the test oil is Shangri-La, the test oil consistency is 9.5MPA.S, the room temperature is 30 °C, the air humidity is 45%. Above is for reference.

Install Instruction:

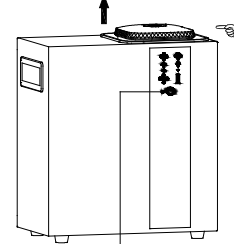

- a, extended press 5 seconds to switch off machine
- b, press for 1 second to switch on
- c, quick press three times to restore original setting of machine

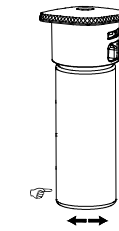

- 1, connect to power supply
- 2, put the magnet key against unlock area
- 3, pull out atomizer head with bottle from top of machine

- 4, remove bottle by rotating counterclockwise, and fill in fragrance oil. then tighten it by clockwise rotation, put atomizing head back to machine, it locks up automatically.

Packing Accessories:

Power Supply	Key	User Manual

After Sale Service:

The warranty period of the equipment is 1 year from the date of sale. Easily damaged accessories such as housing, wire and outer pipe are not covered by the warranty, and man-made damage and accident damage are not covered by the warranty. If the warranty period is exceeded, we will charge maintenance fees.

Warranty Card:

Maintain Date	Maintain Item	Maintain Company	Maintain Staff

Device Maintains:

Maintain the device every 6 months, or replace the essential oil if the scent weaker.

1. Open the device cover, take off the oil bottle.
2. Each time replace the essential oil, should clean the oil pipe filter.
3. Pour an appropriate amount of alcohol into the essential oil bottle and clean it;
4. Check whether the nozzle of atomizing core is clean. If there is blackening and powder accumulation, it can be removed with toothpick or paper towel;

Fault Resolution:

Device Fault	Solution
Device not work	- Check if use wrong power supply. - Check if the power is on. - Check the setting of device work time.
No atomization	- Check if the pump work normal, if the nozzle blocked. - Check if the fog outlet seal ring broken or fall off. - Check if the oil pipe blocked or fall off.
Weak atomization	- Check if the seal ring of fog outlet pipe damage. - Check if the nozzle blocked. - Check if the connection of atomizer and nuzzle loose.
Oil leak	- Check if the atomizer broken. - Check if the gasket broken and need change. - Check if the connection of oil bottle and atomizer dose tighten.
Abnormal noise	- Pump loose, fix the pump. - Pump broken, change new pump. - Check if the fan fixed well.

APP User Manual

1. Download and register your account

- (1). Scan the QR code of the cover or search the "Scent Master" app in the app store to download and install.
- (2). Open the app homepage interface, click [online Mode] (Figure 1)
- (3). Click [Register new account] for the first time (Figure 2).
- (4). Register a new user according to the prompt in the registration interface (Figure 3).

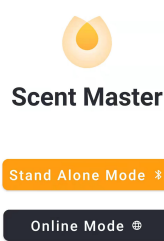


Figure 1

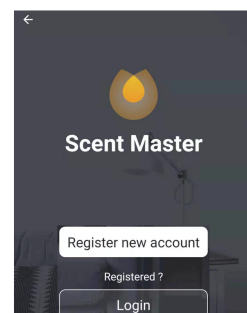


Figure 2

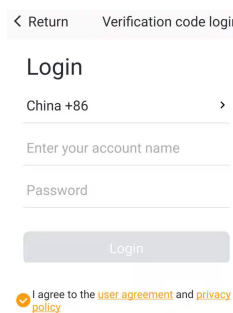


Figure 3

2. 4G connection

- (1). Open [online Mode], and click the [New device] or [4G] icon (Figure 4).
- (2). Follow the prompts to the next step (Figure 5).
- (3). Scan the QR code pasted on the device and add the device (Figure 6). Note: This QR code is unique, please keep the equipment properly. It is recommended to take photos and archive.
- (4). In the add success interface, you can rename the device and click Finish to enter the operation interface (Figure 7).

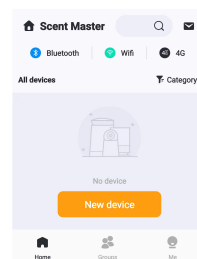


Figure 4



Figure 5



Figure 6

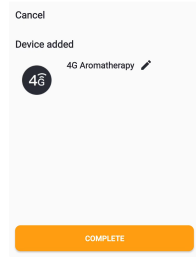


Figure 7

3. Wifi connection

- (1). Open [online Mode], and click the [New device] or [WIFI] icon (Figure 8).
- (2). Follow the prompts to the next step (as shown in Figure 9).
- (3). Select WiFi, input the password, and click Next (Figure 10).
- (4). Follow the prompts to the next step (Figure 11)
- (5). If a timeout occurs, perform the above steps again. Successfully jump to the added device (figure 12).
- (6). Device added, you can rename the device and click Finish (Figure 13).

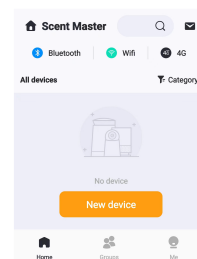


Figure 8

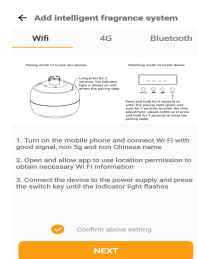


Figure 9

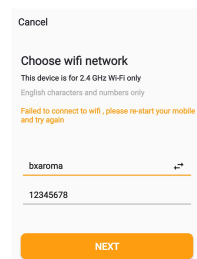


Figure 10

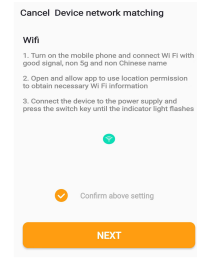


Figure 11

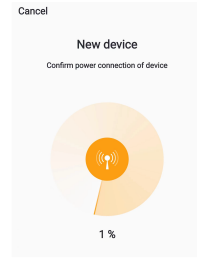


Figure 12

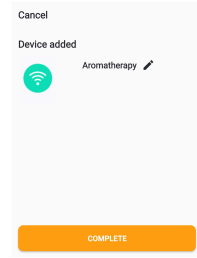


Figure 13

4. Set working mode

- (1). Click [working mode] in the equipment operation interface (Figure 14).
- (2). Select the mode to be set, and 5 working modes can be set (Figure 15).
- (3). Set working time and week selection (Figure 16)

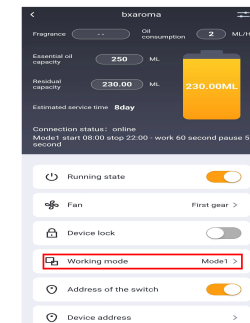


Figure 14

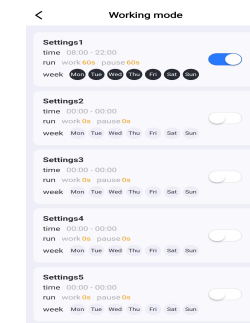


Figure 15

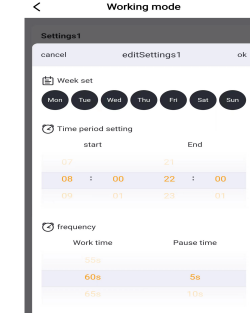


Figure 16

Select the week to open

Up and down sliding adjustment

Up and down sliding adjustment

5. Method of deleting device

- (1). Open [online Mode] interface and extended press the device name to pop up, Sticky on top / Rename / Program device working mode / share device/delete, click [Delete] finish the operation (Figure 17 / 18).

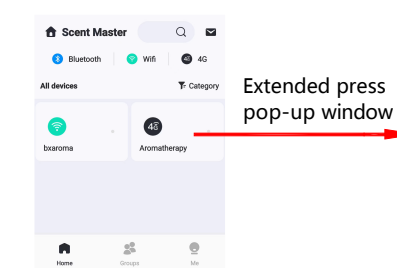


Figure 17

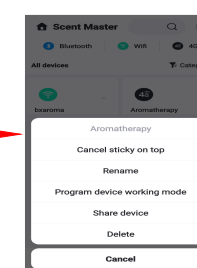


Figure 18

(2). Method of deleting device

- ① [online Mode] interface and click the device to be removed (Figure 17).
- ② In the control interface, click the icon "≡" (Figure 19).
- ③ On the equipment information page, click [Remove equipment] to complete the operation of removing equipment (Figure 20).

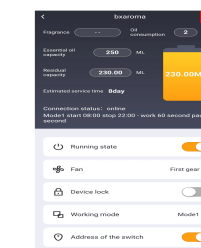


Figure 19

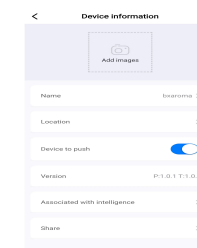


Figure 20

6. Group management

- (1). Open [online Mode] select [Groups] interface, and click [+] to add a level 1 group (Figure 21).
- (2). Long press group list pop-up window, Sticky on top / Adding/remove devices / Group location / Rename / Settings of group / Group sharing / Group delete (Figure 21 / 22).
- (3). Group sharing can authorize other members to operate the equipment. Click [add members] and fill in the information of the authorizer. Group members have [admin] and [member] (Figure 23 / 26).
- (4). Click the grouping list to enter the secondary grouping, showing the equipment and secondary grouping associated with the primary grouping. Click [+] to add the secondary grouping Level grouping (Figure 21 / 24).
- (5). Extended press pop-up window of the secondary grouping list to Add / remove devices / Rename / Group settings / Delete the groups (Figure 24 / 25).

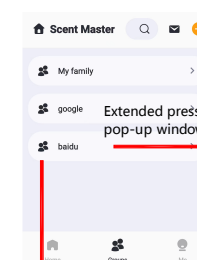


Figure 21

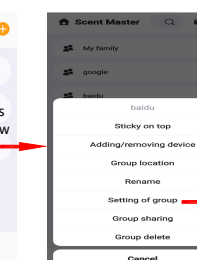


Figure 22

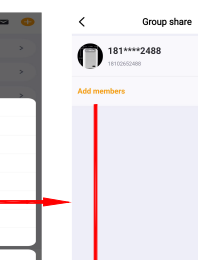


Figure 23

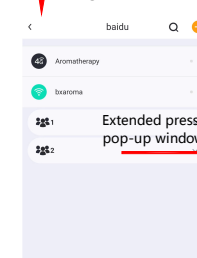


Figure 24

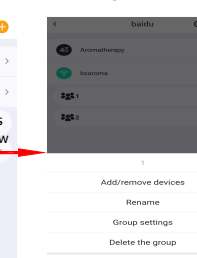


Figure 25

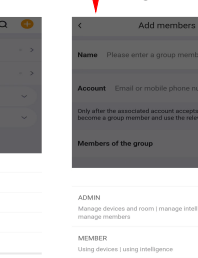


Figure 26